Life Force
Med Beds

Life Force Pod Instructions

Tools

- Rubber Mallet
- Electric Drill w/ Phillips Head
- Tiny Drill Bit 10mm
- Paint Brush and Roller
- Razer Knife
- Wrench 13mm and 19mm

Parts and Accessories

- RF Blocking Paint
- Double Sided Tape
- 1 Inner Back Wall Panel
- 1 Outer Back Wall Panel
- 1 Front Wall Panel
- 2 Inside Side wall Panel
- 2 Outer Side wall Panel
- 1 Ceiling Panel
- 1 Root Panel
- Control Panel

Paint

RF Blocking Paint

a) Paint, Paint Brush roller and roller pan

a) Paint the Inside side portion of the Outer roof, side and back Panels

a) Paint Floorboards or Cardboard Bed Floor - Yellow Paper

a) Let Panels sit and dry while building the pod.

Images to be put here

Paint

Open Frame Boxes

1 -2 and lay out all pieces on the floor as to set up..

a) 4 Long Horizontal Bars
a) 4 Shot Horizontal Bars
a) 4 Vertical Posts
a) 4 Wall Joists

Images to be put here

Paint

Meta Frame

a) Attach both the front and back lower horizontal frame posts to the lower end of the 4 vertical posts to make up the base of the Life Force Pod.

a) Use a rubber mallet to secure in place all frame mounts. - DO NOT USE HAMMER

Images to be put here

Paint

Wall Joist

a) Put stickers on 2 wall joists and attach joists to the lower back Long Frame piece.

a) Attach the Upper Back Frame Bar to vertical posts while securing the Wall Joist to both lower and upper Long Frame Bars.

Images to be put here

Paint

Back Wall Panel

a) Install Fans On Back Panel (Drill Needed) - Lay panel on floor to install.

a) Peel off double sided tape and Set in place the Back Wall Panel.

Images to be put here

Paint

Face Wall Panel

a) **Frame:** Attach the Upper Horizontal Long Frame Post to both ends of the Pod and secure it with a rubber mallet.

a) **Front Panel:** Attach and install the Pod front panel to the frame.

a) **Secure** all four corners with bolts

Paint

Side Panel

a) Slide in place the end panel

a) Add to the wall joist and secure the upper horizontal piece to the vertical post.

a) Secure both end and side of the frame with a rubber mallet.

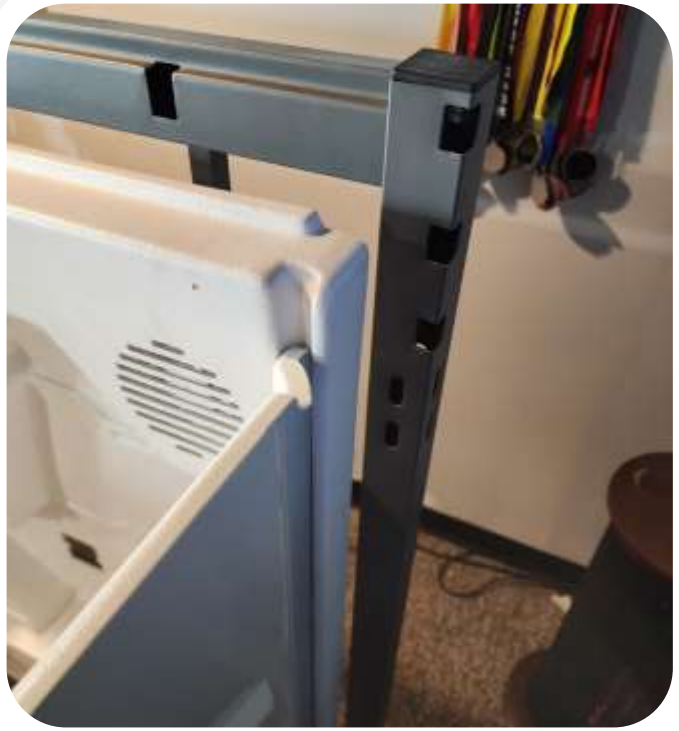

Paint

Floor

Install floorboards. Careful to not scratch the walls.

Images to be put here

Paint

Internal Roof Panel

a) Place Roof Panel on the floor and install reading lighting wiring

a) Install the roof panel to the Pod. Use the self tapping screws and screw in the roof panel to all sides of the Pod.

a) Place LED diamond shaped on top of the roof panel.

a) Make sure neatly all wires from the front panel, reading lights and LED light all flow together to the back of the pod.

a) Secure roof panel to all sides of the pod using self tapping screws.

Images to be put here

Paint

Attach Accessories

a) Coat Hanger

a) Fire Extinguisher

Images to be put here

Electrical

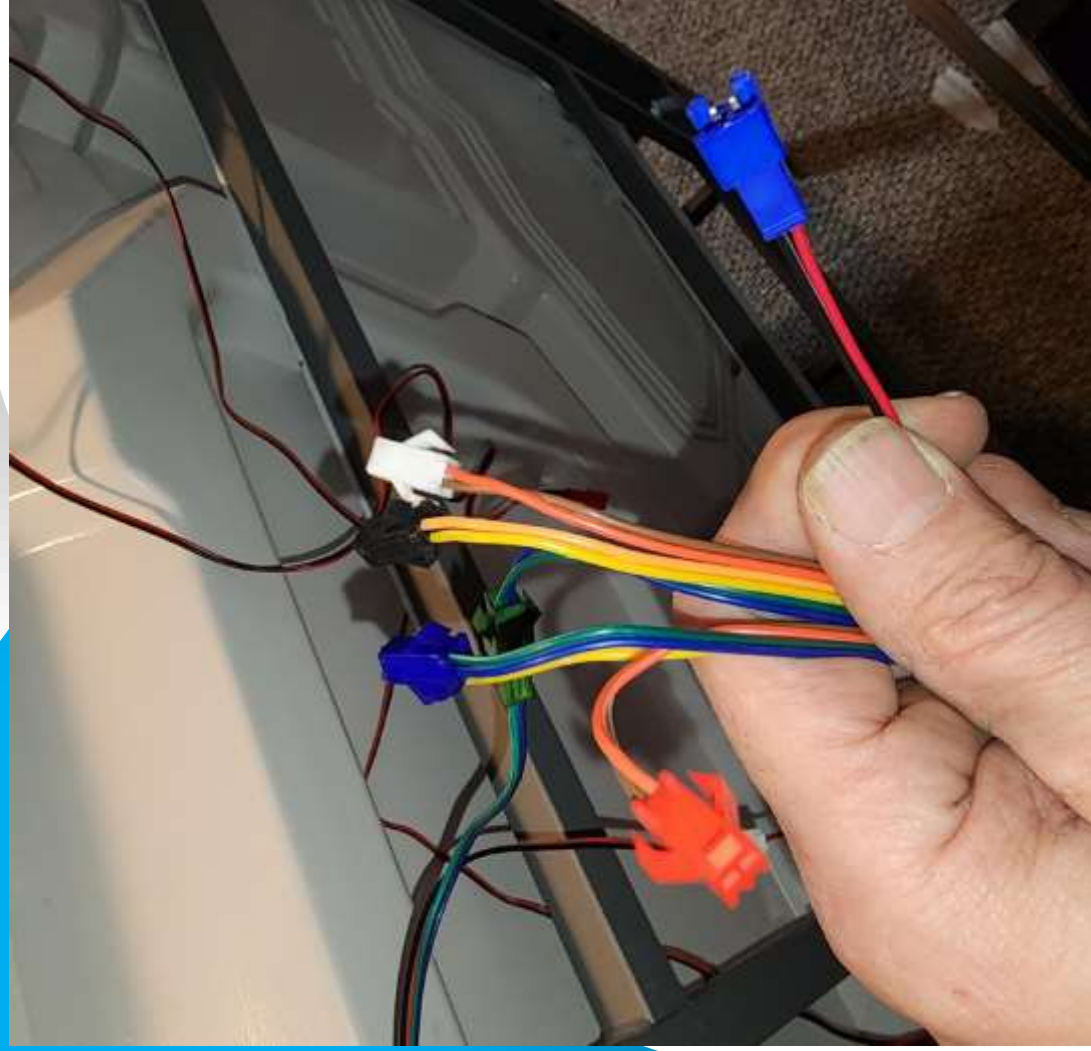

Life Force
Med Beds

Electrical

Control Pannel

a) Carefully pull off bubble wrap on the control panel, be careful not break or pull off any wires.

a) Hold Control Panel in place and Pre-drill holes to control panel.

a) Attach Panel to wall with self tapping screws and plastic caps.

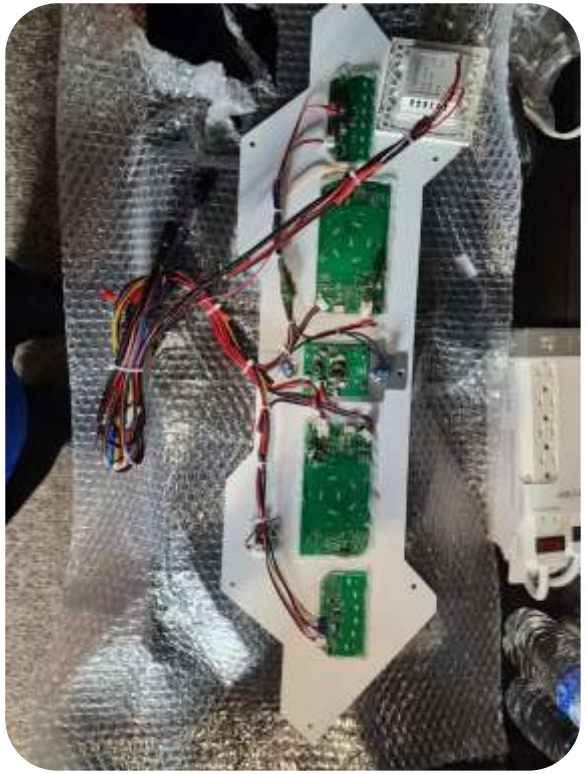

Electrical

Wire Connections

a) Color Match Wires from control panel to accessory wires, fasten and secure connections.

a) Make sure the fan, reading lights, dimmer, Ceiling light color and door lock on the control panel all work perfectly.

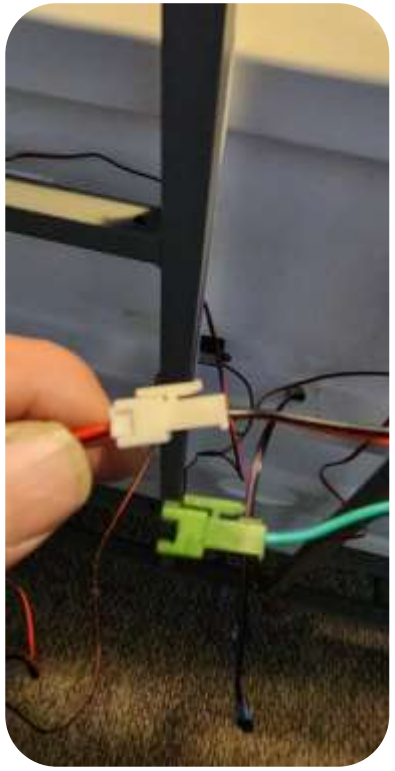

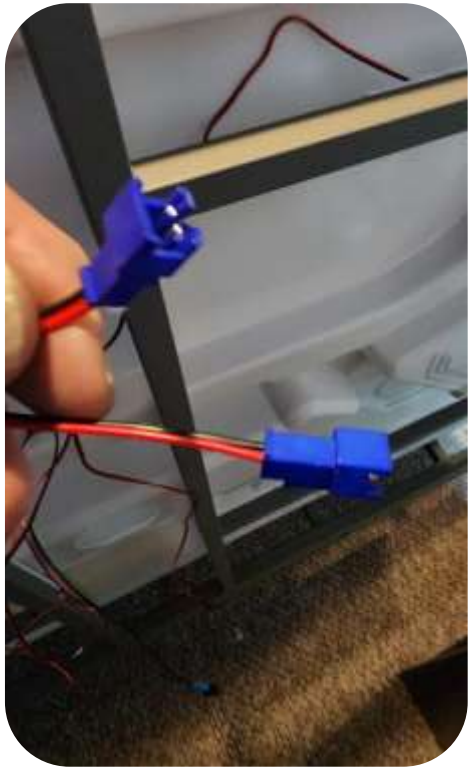

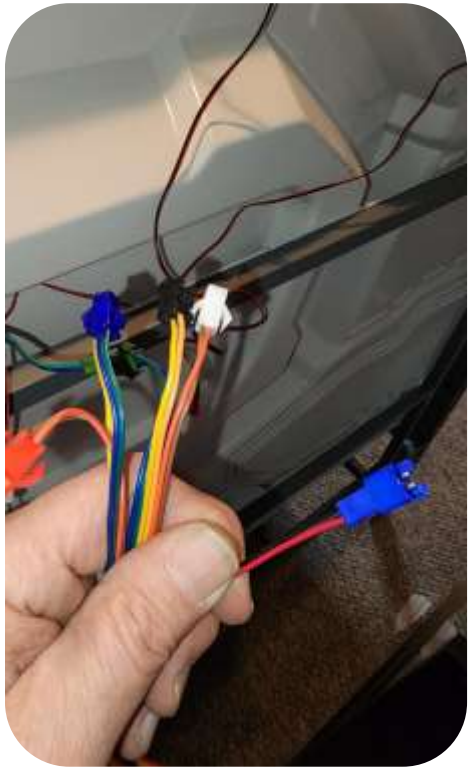

Electrical

Card Reader

a) You will need to remove and reattach wires to get the reader in place.

a) Remove Plastic Face and Screw in Card Reader to the wall.

a) Attach Black 2 prong connection off the card reader to the White wire.

a) Attach the three LED Light Strips to the other end of the White Wire

   i. The 3 LED Light Strips and Ceiling light all should come on when you place the key in the on slot.

a) Plug the Power Cord into the Pod.

Images to be put here

Electrical

Attach Outer Panels

a) Attach painted back, top, side outer walls.

a) Use Self Tapping Screws

Images to be put here

Accessories

Life Force
Med Beds

Accessories

Attach Accessories

a) **Computer:** Start up and load frequency software
a) **Watch:** Sink up to app
a) **Amplifier:** Set Up and Plug In Sound Bar
a) **Grounding Sheets:** Install & Plug In
a) **Power Stip:** Plug in and connect Therapy Devices.

Images to be put here

Accessories

Optional Accessories Install

a) **LED Lights:** Install
b) **Oxygen Concentrator:** Run Oxygen Line from concentrator to Pod
c) Surround Sound System
    i. Receiver
    ii. Speakers
    iii. Sound Bar
d) TV Mount
e) Shelving Mount
f) Tablet Mount
g) Chrome Metal Shims
    i. 1”x12”
    ii. 2”x12”
    iii. 3”x12”
h) EMF Blocking Paint
i) EMF Blocking Stickers
j) Sacred Geometry Stickers

EMF Blocking Paint

Life Force
Med Beds

Thank You